


Azimuth Az' from Declination δ , LHA and Altitude h

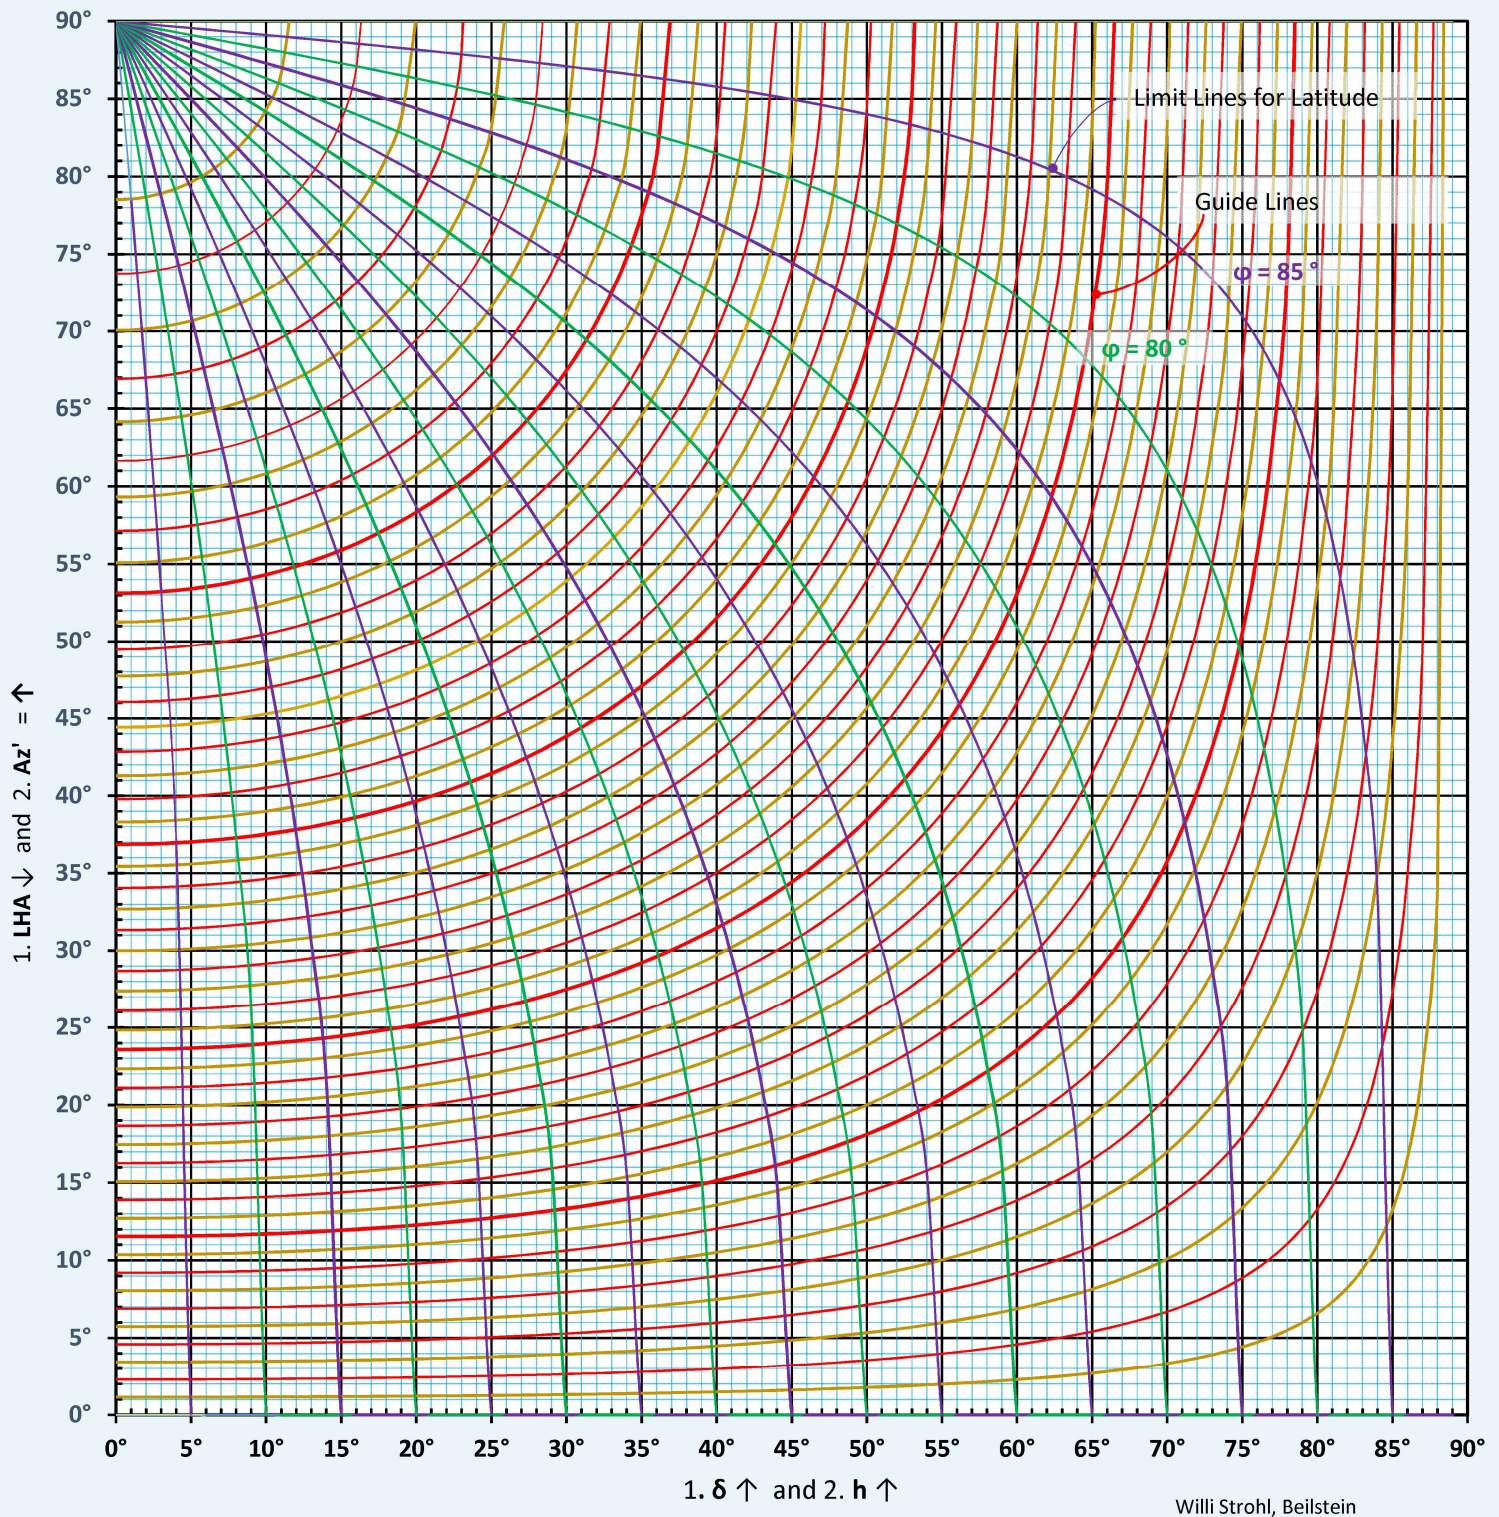

The LHA of the DR-position possibly ranges from 0° to 360° . In the azimuth diagram above however LHA ranges only from 0° to 90° . The table below shows which values for LHA' have to be used as entry for the diagram if LHA is outside the range of 0° to 90° .

If LHA is between:	0°	\leftrightarrow	90°	\leftrightarrow	180°	\leftrightarrow	270°	\leftrightarrow	360°
Diagram to be entered with LHA':	LHA		180-LHA		LHA-180		360-LHA		